


# Ignition Switch

## Test

1. Remove the dashboard lower cover, left knee bolster, and left kick panel (see page 23-60).
2. Disconnect the 4-P connector from the under-dash fuse/relay box and the 5-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	WHT/RED (ACC)	WHT/BLK (BAT -B)	BLU/WHT (IG2 -B)	WHT (BAT -A)	BLK/YEL (IG1)	YEL (IG2 -A)	BLK/WHT (ST)
0							
I	○	○					
II	○	○	○	○	○	○	
III				○	○	○	○

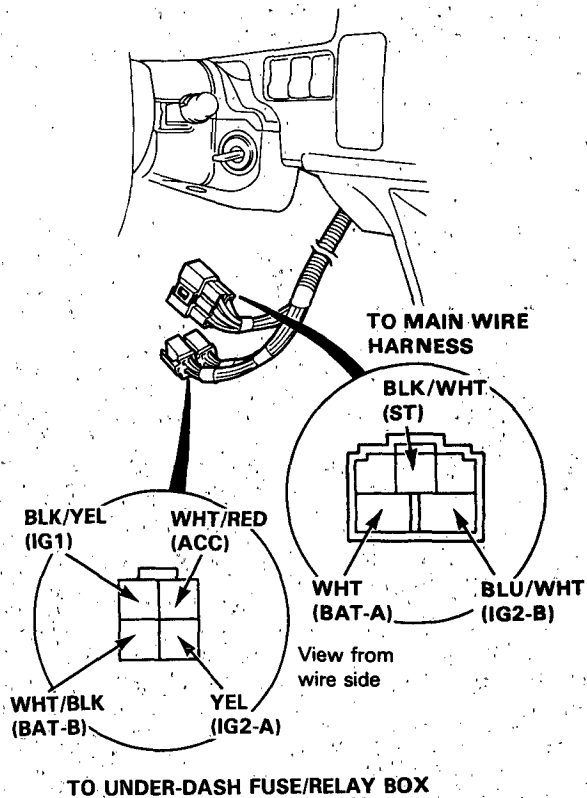

## Electrical Switch Replacement

1. Remove the steering wheel, then remove the steering column covers (see page 23-60).
2. Remove the dashboard lower cover and left knee bolster (see page 23-60).
3. Disconnect the 4-P connector from the under-dash fuse/relay box and the 5-P connector from the main wire harness.
4. Insert the key and turn it to "0".
5. Remove the two screws and replace the switch.

NOTE: The illustration shows M/T.

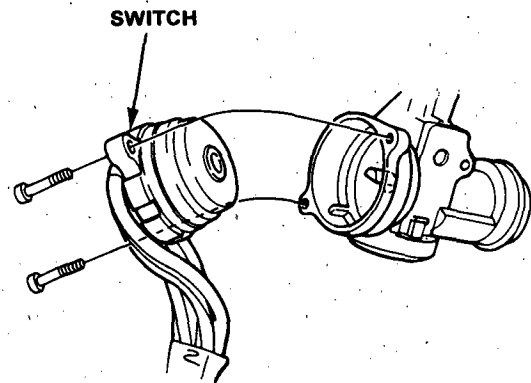

6. Install in the reverse order of removal.