


Hood

Replacement/Adjustment

NOTE: An assistant is helpful when removing the hood.

1. Disconnect the windshield washer hose at the L-joint, then pull it out of the hood.
2. Remove the hood by removing the mounting bolts on each side.
3. To remove the hood hinges, remove the front windshield wipers and air scoop (see section 23).

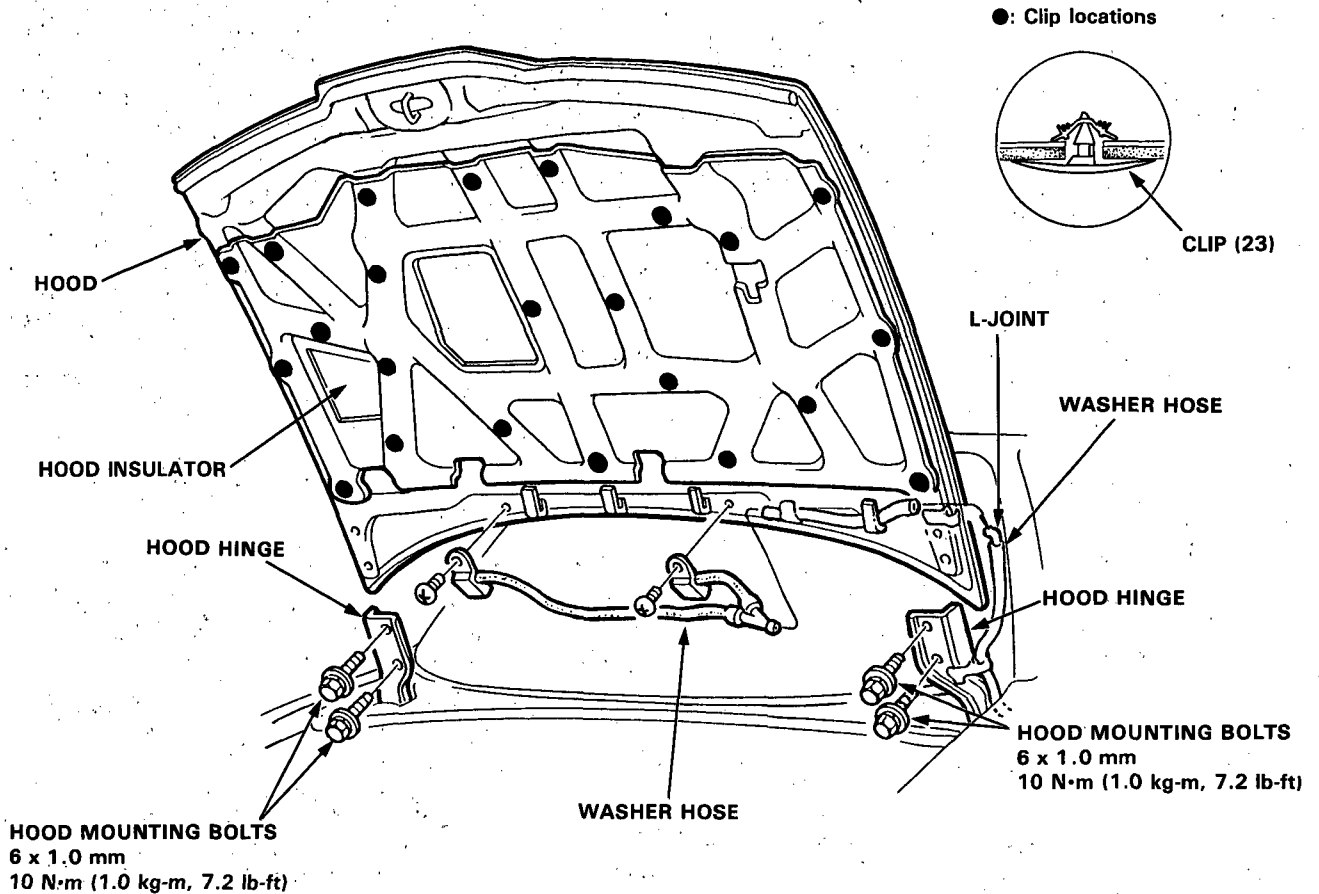

ALIGNMENT:

- The hinges can be adjusted right and left as well as fore and aft by using the elongated holes.
- Adjust the hood latch to obtain the proper height at the forward edge (see page 20-81).

4. Installation is the reverse of the removal procedure.

NOTE: Align the hood with the body.

